


INSTRUCTIONS: REPLACING CHAIN CONTROL ON ROLLER BLINDS

Remove the blind from its brackets/cassette before replacing the chain. To remove the blind from its brackets, hold it at the control chain end and lift it up approximately 5mm, before pushing it towards the other end of the blind.



1. Pull the mechanism out from the roller tube.

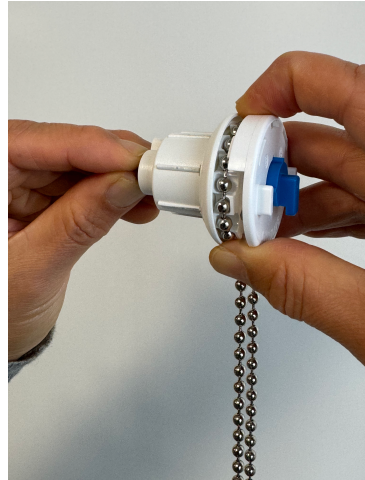


2. Squeeze the flanges of the pin and push it out of the mechanism approximately 12mm - just enough to allow access to the chain.



3. Lift off the unwanted chain.



4. Drop the new chain onto the mechanism. If your new chain has a connector, ensure this is located at the back and close to the mechanism.

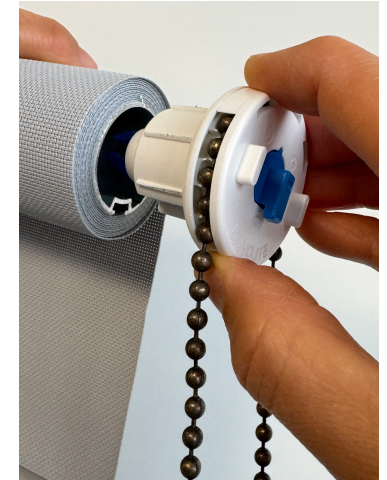

5. Push the pin back into the mechanism, then insert the mechanism back into the roller tube. Note the roller tube has a section with an indented profile that needs to align with the mechanism.

SAFETY WARNING

Chain controls should be kept out of reach of children. Move cots and furniture away from the blind's chain controls.



Love your blinds? Send us some photos or post them on social media - we'd love to see them! Don't forget to tag us @TheBlindShop.

THE BLIND SHOP