

FITTING INSTRUCTIONS – METAL VENETIANS



pic 1



pic 2



pic 3



pic 4



Love your blinds? Send us some photos or post them on social media - we'd love to see them! Don't forget to tag us @TheBlindShop.

PARTS INCLUDED (pic 1)

- 2 x brackets
- 1 x screw pack (type as requested)
- 1 x 2-part cleat with 2 screws

HOW TO FIT:

1. MARK THE BRACKET POSITIONS

- Measure along the headrail to points where the brackets can attach between the ladder strings without obstructing the mechanisms. If your blind has come with more than two brackets, the additional brackets should be spaced evenly across the width of the blind. Note these measurements.
- Mark these measurements across the window at the point where you want to fit the blind.
- Hold the brackets at each of these points and mark the screw holes.

2. FIT THE BRACKETS (pic 2)

If fitting into masonry, drill the screw hole positions with a 5mm drill bit and fit the plugs provided. If fitting into plasterboard, use the 'driva' heavy duty plasterboard fixings at the screw hole positions.

- Secure the brackets into position using the screws provided.

3. FIT THE BLIND (pic 3)

- Hold the blind up to the brackets with the cord controls facing towards you and insert the blind headrail into the brackets.

4. ATTACH THE TILT CONTROL ROD (pic 4)

- Attach the tilt control rod to the tilt mechanism.

5. FIT THE CHILD SAFETY CLEAT

Install the cleat as close to the headrail as possible and at least 150cm from the floor. Make sure the cleat is positioned where it won't interfere with the moving slats. Use the guide below to determine the distance required between the cleat parts to fully consolidate the cords when the blind is fully raised.

Drop of blind	Distance between cleat parts (centre to centre)
up to 100cm	10cm
101 - 200cm	15cm
201 - 300cm	30cm

- Place the cleat on the wall or window recess and mark the holes.
- Secure each part of the cleat using the 2 screws provided.
- Wrap the cords around the cleat in a figure of 8. Ensure all spare cord is securely contained by the cleat.

6. BREAKAWAY SAFETY TOGGLE

The breakaway safety toggle is pre-fitted to the cords so that when a horizontal force is applied, the toggle breaks away eliminating any hazardous loops. To re-assemble, press the breakaway safety toggle together, ensuring the cords are contained within.

OPERATION

RAISE/LOWER

To lower the blind, move the cords towards the middle of the blind gently pulling down until the cord lock releases. To raise the blind, pull the cords downwards until the blind reaches the desired height. To lock the cords, pull them towards the outside of the blind and release.

TILT

Twist the control rod to tilt the slats to the desired angle. Tilt the slats horizontal before raise/lowering the blind to extend the life of the blind.

CARE INSTRUCTIONS

Clean regularly with a feather duster or wipe with a damp cloth.

SAFETY WARNING

Cord controls should be kept out of reach of children. Move cots and furniture away from the blind's cord controls.