

FITTING INSTRUCTIONS – WOOD VENETIANS



pic 1



pic 2



pic 3



pic 4



pic 5

PARTS INCLUDED (pic 1)

- 2 x end brackets
- 1 x central support bracket for blinds over 150cm wide
- 1 x valance
- 2 x end returns with 2 sticky back angle brackets and screws (if requested)
- 2 x velcro pieces
- 1 x screw pack (type as requested)
- 1 x child safety cleat with 2 screws

HOW TO FIT:

1. MARK THE BRACKET POSITIONS (pic 2)

The brackets have fixing holes on all sides so that they can be fixed in whichever direction suits the window best. The door of the brackets must always be facing towards you so that the blind can slide into the brackets.

INSIDE RECESS FITTING

The brackets will be positioned in the corners of the window recess. Mark the screw hole positions using the brackets as a guide.

OUTSIDE RECESS FITTING

Calculate where the brackets will be positioned by marking the width of the blind centrally across the top of the window. Mark the screw hole positions using the brackets as a guide.

SASH WINDOW FITTING

The brackets will be positioned in the corners of the architrave (on the flat area). Mark the screw hole positions using the brackets as a guide.

2. FIT THE END BRACKETS (pic 3)

Note that it's not always necessary to use all four screws on each bracket - for smaller blinds two is sufficient. If fitting into masonry, drill the screw hole positions with a 5mm drill bit and fit the plugs provided. If fitting into plasterboard, use the 'driva' heavy duty plasterboard fixings at the screw hole positions.

- Secure the brackets into position using the screws provided.

3. FIT THE SUPPORT BRACKET (pic 4)

Blinds over 150cm wide are supplied with a support bracket to support the weight of the slats. It should be positioned roughly in the centre of the blind, but avoiding the fabric tapes or strings.

- Calculate where the support bracket will be positioned. Mark this position level with the end brackets.
- Secure the support bracket using the screws provided.

4. FIT THE BLIND (pic 5)

- Hold the blind with the cord controls facing towards you and slide the headrail into the brackets, taking care not to trap the slats or cords.
- Close the doors on the end brackets, ensuring that they click firmly shut.



pic 6



pic 7



pic 8

5. FIT THE VALANCE (pic 6)

Attach the valance to the headrail using the velcro pads provided.

6. FIT THE CHILD SAFETY CLEATS (pic 7)

The child safety cleat should be installed out of reach of children and at least 150cm from the floor. Consider if there are any obstructions on either side of the blind. Make sure the cleats are positioned where they won't interfere with the moving slats.

- a. Place the child safety cleat on the wall or window recess and mark the holes.
- b. Secure the cleat using the 2 screws provided.
- c. Wrap the cords around the cleat in a figure of 8. Ensure all spare cord is securely contained by the cleat.

OPERATION (pic 8)

RAISE/LOWER

If you requested right side raise/lower controls, gently pull on the right hand cord controls to raise and lower your blind. To lock the blind into position, pull the cords over to the right. To release the blind pull the cords down and over to the left.

TILT

If you requested left side tilt controls, gently pull on the left hand cord controls to tilt the slats to the desired angle.

CARE INSTRUCTIONS

Clean regularly with a feather duster or wipe with a damp cloth.

SAFETY WARNING

Cord controls should be kept out of reach of children. Move cots and furniture away from the blind's cord controls.



Love your blinds? Send us some photos or post them on social media - we'd love to see them! Don't forget to tag us @TheBlindShop.