



# FITTING INSTRUCTIONS – MAGNETIC HOLD DOWN KIT FOR ROLLER BLINDS

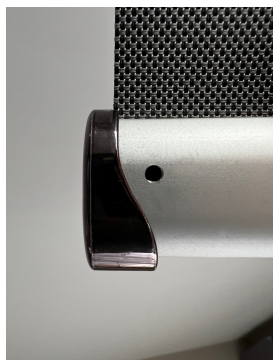

pic 1

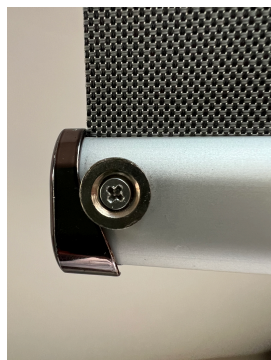

pic 2



pic 3



pic 4



pic 5

## PARTS INCLUDED

2 x magnets  
2 x metal discs  
4 x screws  
1 x drill bit

## \*IMPORTANT NOTE\*

The magnets are to be fitted to the window frame/wall.  
The metal discs are to be fitted to the back of the blind.

## HOW TO FIT

1. Position the blind at the height you want the magnets to function.
2. Identify points at each end of the back of the bottom bar which line up nicely with the window frame/wall. Drill a hole into each end of the back of the bottom bar using the drill bit provided. (pic 1)
3. Using each hole, screw the metal discs to the bottom bar using the screws. (pic 2)
4. Attach the magnets, with the screws in place, to the fitted discs. This will allow you to mark the window frame/wall at the precise fixing points. (pic 3)
5. Carefully detach the magnets, with the screws in place, and screw the magnets to the window frame/wall. (pic 4)
6. You should now find that when you position the blind at the correct height, the magnets will attach to the bottom bar. (pic 5)

## SAFETY WARNING

Keep children away from magnets.



Love your blinds? Send us some photos or post them on social media - we'd love to see them! Don't forget to tag us @TheBlindShop.